CAUTION: ELECTRIC TOY

CONTAINS AC POWER ADAPTER FOR THE TALKBOX TRANSMITTER; THE ADAPTER DOES NOT CONNECT TO T.V. TEDDY. NOT RECOMMENDED FOR CHILDREN UNDER 3 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTION SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. NOTE: BE SURE TO EXAMINE THE TALKBOX AND AC ADAPTER PERIODICALLY FOR POTENTIALLY HAZARDOUS PARTS THAT MAY NEED TO BE REPAIRED OR REPLACED. CONTACT THE YES! CUSTOMER RELATIONS DEPARTMENT IF YOU NEED ASSISTANCE. DO NOT ATTEMPT TO REPAIR THEM YOURSELF. INPUT: 120 VAC, 6.0 W, 60HZ ONLY OUTPUT: 8 VDC, 200 MA.

TV Teddy®

CARE & INSTRUCTIONS

YES! Entertainment Corporation™ is dedicated to providing quality children's entertainment products. We offer a family of innovative and imaginative products which encourage creativity, participation, and fun.

Should you have questions or comments, please contact our Customer Relations Department (510) 463-5550.

YES!™

GETTING STARTED

Welcoming T.V. Teddy® into your home is a simple process. You need a television, a VHS videocassette player, and batteries. T.V. Teddy supplies the rest. Follow these steps and enjoy the fun of watching special programs with T.V. Teddy.

A. Check Package Contents

B. Insert T.V. Teddy's Batteries

C. Install the TalkBox™

D. Enjoy the Show with T.V. Teddy!

A. CHECK PACKAGE CONTENTS

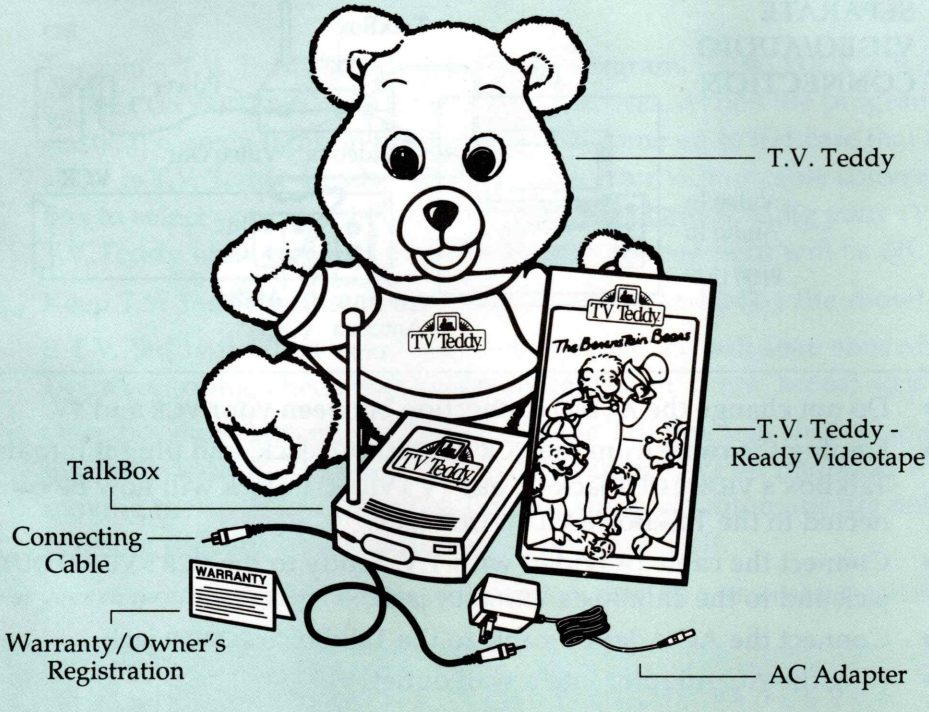

B. INSERT T.V. TEDDY'S BATTERIES

T.V. Teddy requires 4 C-size 1.5 volt disposable alkaline batteries which are **not included**. Rechargeable batteries are not recommended.

To insert fresh batteries, lift the flap on the bottom of T.V. Teddy to expose the battery cover. Loosen the safety screw, and lift up the cover to remove it. Insert the 4 new batteries as shown below. Slide the battery cover back, secure the safety screw, and reattach the flap. Do not allow your child to use the product until the battery cover has been secured.

Battery Compartment with Batteries

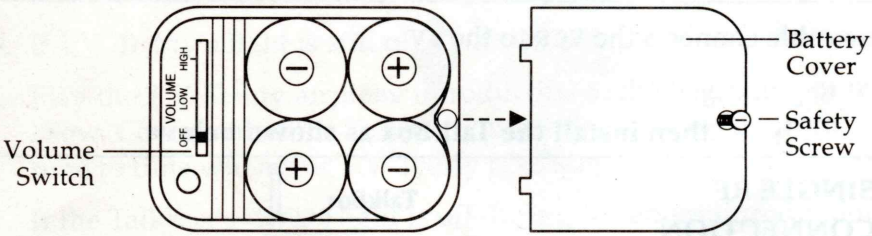

Batteries must always be installed by an adult.

90-Day Limited Warranty: This product comes with a ninety-day LIMITED WARRANTY the terms of which are described in the warranty card included with the product. If you experience any difficulties with your T.V. Teddy, please contact YES! Entertainment Corporation's Customer Relations Department at (510) 463-5550 Monday through Friday, 8:00 AM to 5:00 PM Pacific Time. YES! Entertainment Corporation, 3875 Hopyard Road, Suite 375, Pleasanton, CA 94588.

YES! Entertainment Corporation
FCC ID : KRJ-990015
Changes or modifications to the product not expressly approved in writing by YES! Entertainment Corporation may void the user's authority to operate this equipment.

T.V. Teddy is a registered trademark of Shoot the Moon Products, Inc. U.S. Patent No. 4,846,693, No. 4,786,967, and No. 4,875,096. © 1993 Shoot the Moon Products, Inc. All rights reserved. YES! is a trademark of YES! Entertainment Corporation. © 1993 YES! Entertainment Corporation, Pleasanton, CA 94588. All rights reserved.

C. INSTALL THE TALKBOX

The TalkBox is the transmitter which sends the signal from the encoded v
Check how your TV and VCR are currently connected, then install the Talk

If your TV and VCR are connected as shown below...

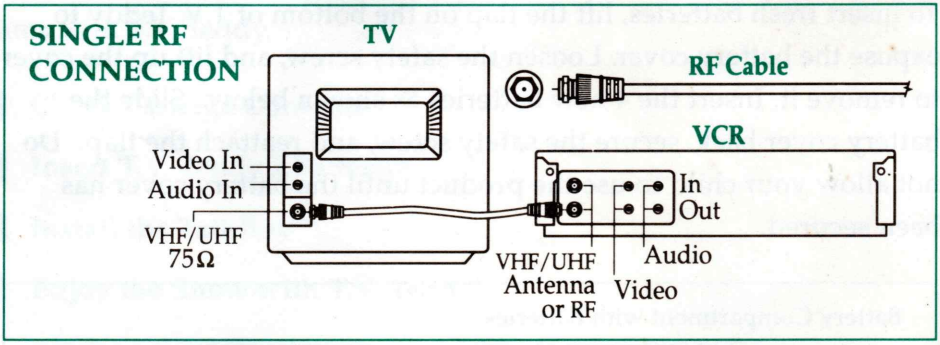

One cable connects the VCR to the TV

...then install the TalkBox as shown below:

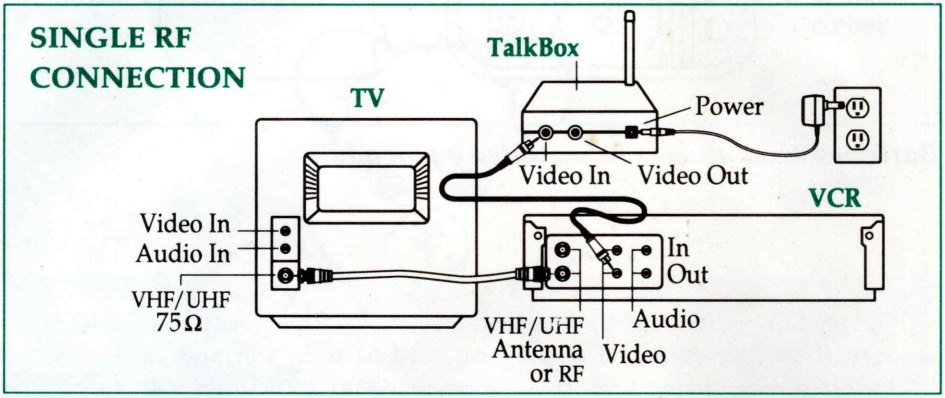

- Do not change the current connection between your VCR and TV.
- Connect one end of the cable provided with T.V. Teddy to the VCR's VIDEO OUT jack.
- Connect the other end to the TalkBox's VIDEO IN jack.
- Connect the AC Adapter cable to the TalkBox's POWER jack.
- Plug the AC Adapter into a wall outlet.
- Leave the TalkBox's VIDEO OUT jack unconnected.

The TalkBox installation is a one-time permanent procedure. The installe

ideo program to T.V. Teddy. There are two ways to install the TalkBox.
Box as described for that connection.

If your TV and VCR are connected as shown below...

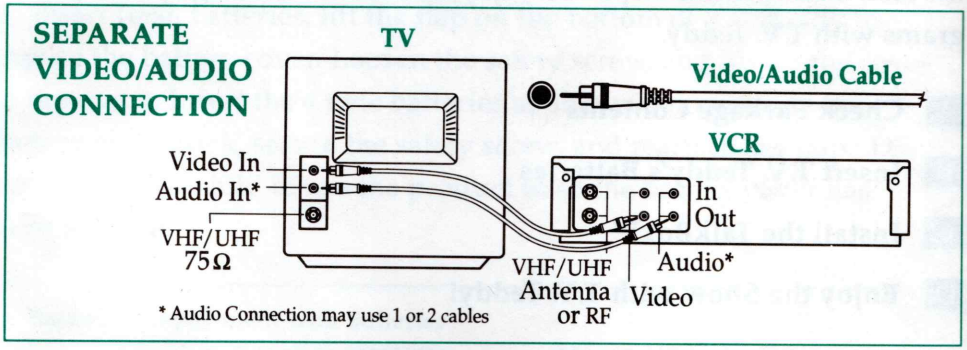

Two or three cables connect the VCR to the TV

...then install the TalkBox as shown below:

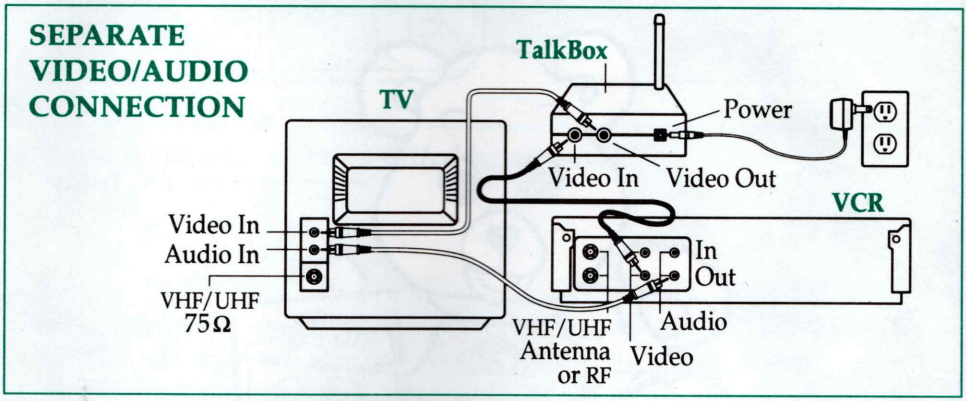

- Do not change the AUDIO connection between your VCR and TV.
- Unplug the cable from the VCR's VIDEO OUT jack, and plug it into the TalkBox's VIDEO OUT jack – your TV's VIDEO IN jack will now be connected to the TalkBox's VIDEO OUT jack.
- Connect the cable provided with T.V. Teddy to the VCR's VIDEO OUT jack and to the TalkBox's VIDEO IN jack.
- Connect the AC Adapter cable to the TalkBox's POWER jack.
- Plug the AC Adapter into a wall outlet.

d TalkBox will not affect the operation of your VCR, TV, or remote control.

D. ENJOY THE SHOW WITH T.V. TEDDY!

Follow these steps ***in the order shown:***

1. **Turn on the TV and VCR.**
2. **Turn on the TalkBox** by pushing the blue button in front. The red light will come on to indicate that it is receiving electric power.
3. **Turn on T.V. Teddy** by moving the VOLUME switch (located on the bottom of the bear) from OFF to LOW or HIGH. The green light next to the switch will come on to indicate that T.V. Teddy is activated. Always **reset the switch** by first moving it to OFF, then to LOW or HIGH.

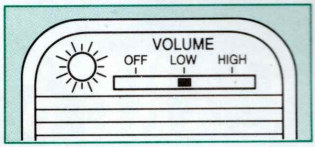

   YOU MUST TURN ON THE TALKBOX BEFORE TURNING ON T.V. TEDDY, or T.V. Teddy will automatically shut off. If this happens, start again from Step #2.

4. Insert a T.V. Teddy-Ready **videotape** into the VCR and press PLAY. The green light on the TalkBox will come on whenever T.V. Teddy is talking.

   OR

   Turn on a T.V. Teddy-Ready **television program**, USING YOUR VCR OR CABLE CONVERTER BOX TO SELECT THE CHANNEL. When the program starts, the green light on the TalkBox will come on to indicate that the show is T.V. Teddy-Ready. You must use your VCR or cable converter box to select your channel. If you select the channel using your TV, T.V. Teddy will not work, and the TalkBox's green light will be off.

5. Keep T.V. Teddy within 20 feet of the TalkBox and enjoy the show!

   If T.V. Teddy is taken out of this 20 foot range, he will soon shut off. Upon returning, check that his green light is on. If not, repeat step #3.

   Once the show is over, T.V. Teddy and the TalkBox will shut off automatically within 7 minutes. T.V. Teddy can be shut off manually by moving the switch to OFF. The TalkBox shuts off automatically only – pressing the blue button will reset it, not shut it off.

For your convenience, a short version of this section is on the bottom of the TalkBox.

T.V. TEDDY INTERACTS ONLY WITH SPECIAL T.V. TEDDY-READY PROGRAMS. LOOK FOR THIS SYMBOL TO BE SURE!

TROUBLE-SHOOTING

Many problems can be solved quickly and easily using this guide. Here's what to do if...

The **videotape** is playing and the show is on, but T.V. Teddy is silent:

1. Verify that the videotape is T.V. Teddy-Ready.
2. Confirm that the TalkBox's RED power indicator light is on. If not, check that the TalkBox's AC adapter is properly connected and receiving electric current.
3. Reset the TalkBox by pressing the blue button in front.
4. Verify that T.V. Teddy is on (LOW or HIGH) and that his green light is on. If the light is off, turn off T.V. Teddy to reset; wait a few seconds; then turn T.V. Teddy back on.
5. If T.V. Teddy's light is still off, CHANGE T.V. TEDDY'S BATTERIES.
6. Play the T.V. Teddy airplane introduction at the beginning of the show. Confirm that the TalkBox's GREEN light comes on from time to time whenever T.V. Teddy is talking.
7. If the TalkBox's GREEN light is off during the entire introduction, adjust the tracking on your VCR.
8. If T.V. Teddy is still silent, check that the TalkBox is properly installed.
9. Proceed with the instructions in the "ENJOY THE SHOW WITH T.V. TEDDY!" section.

The **television program** is on but T.V. Teddy is silent:

1. Follow steps 2 through 5 above.
2. Confirm that the TalkBox's GREEN light is on. This GREEN light indicates that the feature is T.V. Teddy-Ready and that the system is properly connected and operating.

   If the GREEN light is off, first make sure that you are selecting the channel using your VCR or cable converter box. Second, verify that the television show is T.V. Teddy-Ready. Third, check that the TalkBox is properly installed.
3. Proceed with the instructions in the "ENJOY THE SHOW WITH T.V. TEDDY!" section.

TROUBLE-SHOOTING (continued)

You hear static when T.V. Teddy is on:

1. MAKE SURE THAT T.V. TEDDY'S BATTERIES ARE FRESH.
2. Move T.V. Teddy closer to the TalkBox or a few feet to the right or left.
3. There may be interference from your cordless phone – change its frequency.
4. There may be interference from another electronic device – turn it off while playing with T.V. Teddy.

The videotape is playing, but the picture does not show on the television:

1. Verify that the TV and VCR are both on and that the VCR is in PLAY mode.
2. Check that cable connections are secure and per "INSTALL THE TALKBOX" instructions.
3. Confirm that the VCR is set to SP mode. If needed, adjust the VCR's tracking.

T.V. Teddy starts and stops mid-sentence while a videotape is playing:

1. Adjust the VCR's tracking.
2. Clean your VCR's videotape head using a VHS video head cleaner.

CARING FOR T.V. TEDDY

DO wipe dirt off T.V. Teddy with a damp cloth rubbed with mild soap. Air dry and brush to restore proper appearance.

DON'T immerse T.V. Teddy in water.

DO keep clean your VCR's videotape head by using a VHS video head cleaner.

DO use fresh batteries at all times.

DON'T interfere with T.V. Teddy's eye or mouth movements.

DO place the TalkBox in a stable place to avoid falling.

DO treat T.V. Teddy as a friend – gently and with respect!

#999520

Printed in Hong Kong